


Bell Mobility Alphanumeric Pager

For self-service paging, please visit Web Xtend





<http://xtendwebx/webxchange/wc/wwwcqi.dll?40UU406N~Login>

Turning pager On and Off


To turn pager on:

Press and hold the  button.

To turn pager off:









1. Press  button until the icon menu is displayed on the screen.
2. Press  or  until **POWER OFF** is displayed on the screen.
3. Press  button.

Receiving and Reading Messages







 
Press  button to stop the alert and read the message.

Deleting Messages

To delete an individual message:

1. Press  button until the main menu is displayed on the screen.
2. Press  or  until **READ MESSAGE** is displayed on the screen.
3. Press  button until the message to be deleted is displayed on the screen.
4. Press and hold  button until a menu appears on the bottom of the screen.
5. Press  or  until **scissor icon** is highlighted.
6. Press the  button. Message will be deleted.








 
To delete all Messages:

1. Press  button until the icon menu is displayed on the screen.
2. Press  or  until **DELETE ALL** is displayed on the screen.
3. Press  button.
4. Press  or  until the **Y** is highlighted.
5. Press  button. All messages will be deleted.

(Only unlocked messages can be deleted.)


Locking and Unlocking Messages

To lock a message:

1. Press  button until the main menu is displayed on the screen.
2. Press  or  until **READ MESSAGE** is displayed on the screen.
3. Press  button until the message to be locked is displayed on the screen.
4. Press and hold  button until a menu appears on the bottom of the screen.
5. Press  or  until **key icon** is highlighted.
6. Press the  button. Message will be locked. The lock icon will appear in the top left hand corner.

To unlock the message:









Follow the steps 1-6 to lock a message.

6. Press the  button. Message will be unlocked. The lock icon will disappear.





Saving Messages

(Saved messages are stored in the notebook.)

To save an individual message:




 
 



1. Press  button until the main menu is displayed on the screen.
2. Press  or  until **READ MESSAGE** is displayed on the screen.
3. Press  button until the message to be deleted is displayed on the screen.
4. Press and hold  button until a menu appears on the bottom of the screen.
5. Press  or  until **notebook icon** is highlighted.
6. Press the  button. Message will be saved.

To read a saved message:





1. Press  button until the main menu is displayed on the screen.
2. Press  or  until **READ NOTEBOOK** is displayed on the screen.
3. Press  to read message.

Setting the Date and Time

To set the date and time:

1. Press  button until the icon menu is displayed on the screen.
2. Press  or  until **SET TIME & DATE** is displayed on the screen.
3. Press the  button.
4. Press  or  to adjust time and date.
5. Press the  button to move to cursor.
6. Press  button to exit.

Setting to Vibrate or Audio Mode

1. Press  button until the icon menu is displayed on the screen.
2. Press  or  until **SET ALERT** is displayed
3. Press  button to chose between Audible or Vibrate Mode





Low Battery Indicator

When the battery is low, a low battery icon will be displayed.

Maildrop

The Maildrop is used to store public mass messages and will not be used at SMH.

Legend:

-  → Exit / Power On Button
-  → Right button
-  → Left Button
-  → Enter / Read Button